 


Activating an SOS alarm



When you need help, press the SOS button fo 3-4 seconds until you hear a voice prompt, indicating an SOS alarm. This starts the sequence of sending a "help me!" text message to your emergency contact numbers followed by the outgoing calls.

If the device fails to connect to the first number, it will call the second number after delay of 10 seconds. In case the second number fails to be connected as well, the system will connect to the third number etc.

• Between each call, there will be a 10-seconds
• To get an initial location for the GPS features,
• To make a call, press the CALL button for 3 delay, during which time, the user can **stop** the call sequence or prevent a possible false alarm by pressing the SOS button.


• Use the side buttons +/- to adjust the sound volume during a call.

Please remember to program emergency contact numbers. It is not mandatory for all ten authorized numbers to be set, however a

TIP Please be patient during the call sequence. There can be short delays as the alarm calls phones which maybe out of range or delivered to recipients' voicemail.

Getting a GPS fix

use outdoors or near a window so the device seconds and you will hear a beep, and then it

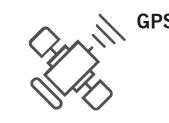


can get a fix on the satellites. This could take a few minutes depending on your environ-



Making a phone call

 will dial the defined number.



• To end the call, press the SOS button.

Silent mode button

warnings; double-click once more to turn voice warnings on.



• Put device on charging base more than 30 seconds, and they will be paired automatically via Bluetooth.

Specification:

• Double-click this button to **turn off voice** • Dimension: 62mm*47mm*17mm • Weight: 53g

- Battery: Rechargeable, 3.7V, 950mAh Charging voltage: 5V DC
- Waterproof: IP67 • 4 locating technologies: GPS, BLE, WIFI,

Warning: Keep the IMEI and SIM confidential to maintain

Caution:

Please comply with the instructions to extend the unit life:

- Don't use or store the unit in dusty places. Avoid storing or using the unit likely to be
- exposed to extremes of temperature. Clean the unit with a piece of dry cloth. Don't clean using chemicals or detergents.
- Don't disassemble or refit the unit. Using other batteries will cause unwanted situation.

Privacy and security.

