

 
 
 
01. About EV-10

The Safety Smart Watch is designed for the elderly and lone worker. The watch combines many intelligent functions, such as SOS alarm, two way talking, heart rate, pedometer and so on. The operation is very simple. Please read this operation guide carefully before using it.

Accessories




02. Accessories

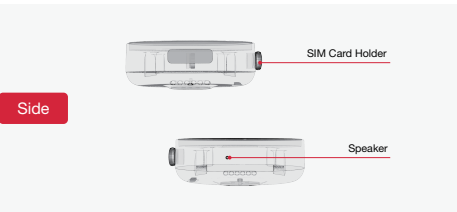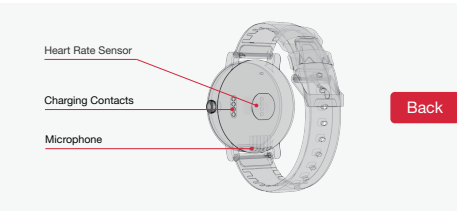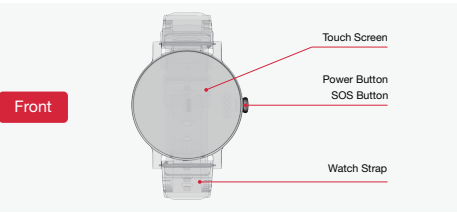


03. SIM Card Installation


Please do as below picture shows.

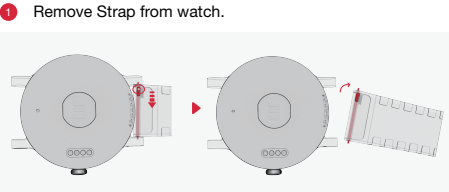 

 
2 Remove SIM card holder from the watch and put a Nano SIM on the holder.

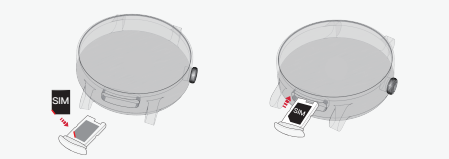

 3 Put the holder back and lock the strap on watch.

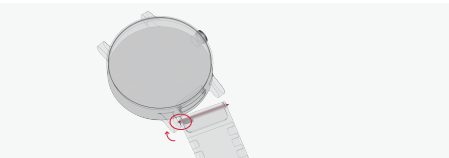

 04. Charging your Watch

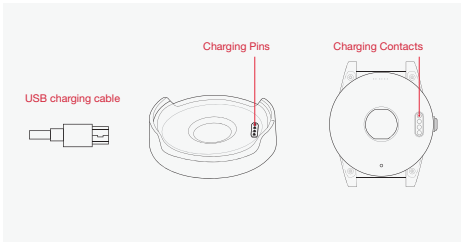

- Connect the USB cable from charging base to the AC adaptor.
- Place the watch into the charging base correctly, you will hear spoken confirmation "your watch is charging".
- Please fully charge the battery daily for around 2 hours or when battery is low.



05. Power On/Off

- Press and hold the power button for 5~10 seconds to turn on the device until the watch face appears on the screen.



 
- Enter the Settings menu, tap on the Power Off button, and wait until the screen turns off.




06. Functions and Basic Settings

When the watch is turned on, slide leftwards or rightwards to view all available functions. it displays Watch Face, Weather, Heart Rate, Contact, Steps and Settings.


- 1 At watch face, you can see time, date, heart rate and steps.
- 2 There are two watch faces for your option. Sliding right to the end and click settings, select watch face and choose what you like by sliding left and right.

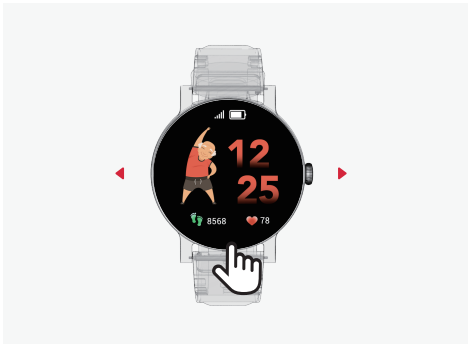

 07. Heart Rate Measurement

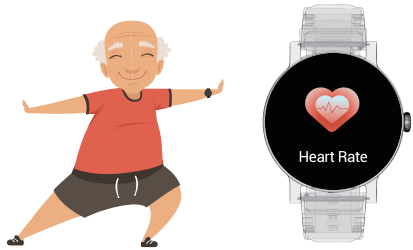

 - Wear the watch on the left hand and click heart rate, after several seconds checking, the screen the will display your heart rate BPM.

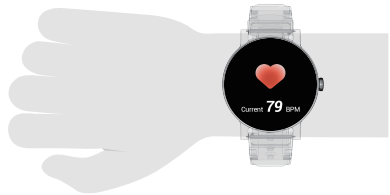

08. Activating an SOS Alarm

There are two ways to activate SOS alarm.

- Pressing the side button for 3 seconds until you feel the watch vibrate.



- When screen is on, long press the screen for 3 seconds until you feel the watch vibrate.



- After SOS alarm is activated, you will hear a voice prompt confirming the activation of the SOS alert and allowing you approximately 10 seconds to cancel the alarm. If the SOS is not cancelled in time an SOS alert text message is immediately sent to the emergency contact numbers followed by the outgoing calls.
- If the watch fails to connect to the first number, it will call the second number after delay of 10 seconds. In case the second number fails to be connected as well, the system will connect to the third number etc.
- Between each call, it will have 10 seconds delay, during this time, user can stop call sequence or prevent a possible false alarm by pressing SOS button.

09. Notes on Voicemail

We advise emergency contacts to switch off any voice mail facility on their phone to prevent delay in reaching help. However, the followin safe-guards are used if a voicemail is reached:

- The wearer can end the current call by clicking the SOS button and the calling sequence to continue if the voice mail does not automatically disconnect.
- An emergency contact can call back to the watch if they are disconnected. Remember that the watch maybe already calling the next contact unless the calling sequence has been stopped.



10. Fall Alarm

The watch can automatically detect a fall. When this occurs the watch will give a warning message to the user.



 
some daily activities like sports oe even sitting down abruptly can trigger the fall alarm.

The wearer has a short time to cancel a fall alarm by clicking the Cancel on the watch. If the alarm is not cancelled, emergency contacts will be called.

TIP It is possible that the watch will not detect every real fall. We strongly advise the wearer to press the SOS button in any emergency situation, if they are able.

11. Getting a GPS fix

To get an initial GPS fix, go outdoors or near a window so the watch can get a fix on the satellites. This could take few minutes depending on your environment.

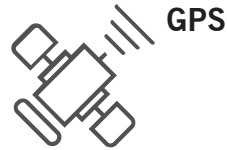

TIP

GPS functionality may be unavailable or inaccurate in some locations (for example, availability or accuracy of GPS location maybe impacted inside buildings or near tall buildings or other tall features or underground).

- The watch also provides Wi-Fi, LBS positioning, when GPS is unavailable, it will switch to Wi-Fi and LBS for locating.
- The home Wi-Fi and beacons provide at home out of home information in addition to optimizing watch battery life.
- Please note Wi-Fi and LBS tracking service is not 100% accurate, it can be used to approximate your location only.

12. General Specifications

- Dimension: 47.5mm*16.9mm/1.87in*0.66in.
- Weight: 65g/2.29oz.
- Battery: Rechargeable, 3.7V,580mAh.
- Charging voltage: 5V DC.
- Waterproof: IP67.
- 4 locating technologies: GPS, BLE, Wi-Fi, LBS.



Safety Smart Watch



4G

4G LTE

SOS

SOS Help Button

Fall Down Alarm

Fall Down Alarm

Geo Fence

Geo Fence